

 VOLTAGE ~
 FUSES

 100 - 120 V
 1/8 A

 220 - 240 V
 1/16 A

50 - 60 Hz 5 W

WARNING: ELECTRIC SHOCK HAZARD. DO NOT OPEN CASE. REFER SERVICING TO QUALIFIED PERSONNEL. FOR CONTINUEDPRICECTION AGAINST FIRE HAZARD, REPLACE FUSES ONLYWITH FUSES OF THE SPECIFIED TYPE AND CURRENT RATING.





TURN SLOTTED COVER TO ADJUST VOLUME

SEE USER'S MANUAL
RS-232 DATA PORT